

How to replace the filter?

1. Filter and UV Lamp Replacement

To maintain the quality of water and the soundness of the water bar, be sure to replace the UV lamp every 12 months, and the filter every 6 months or 2,000 liters, whichever occurs earlier. Replacing the parts is easy and simple and detailed replacement instructions are attached to the replacement lamps and filters.

Prior to replacing the parts, read the attached instructions.

Note - The purification process is internal and protected. The water bar is equipped with a mechanical mechanism that prevents turning on the lamp outside its defined position.

Caution! UV-C radiation is hazardous to the eyes and skin.

2. Filter Replacement Instructions

1. Removing the filter: Remove the water bar's top cover.

Press the **PUSH** button and pull the filter upwards using the extraction ribbon.

2. Inserting the filter: Remove the wrapping from the new filter. Insert the new filter until you hear a click.

3. Water Dispensing:

Place a container beneath the dispensing spout.

Dispense about 4 jugs of cold water until a regular flow is achieved.

4. Air Purging: Enter the AIR PURGING sub menu.

MENU → **MAINTENANCE** → **AIR PURGING**

To start the purging process, press the **OK** button and wait for the process to complete. Press **↩** to return to HOME SCREEN (Not applicable for all models)




Warning!
Do not dispense hot water while replacing the filter.

3. Displaying and Resetting the Filter Replacement Timer

This option enables showing the time till the next filter replacement on the display; and resetting it if necessary. To display or reset the filter replacement timer, enter the FILTER REPLACEMENT sub menu.

MENU → **MAINTENANCE** → **FILTER REPLACEMENT**

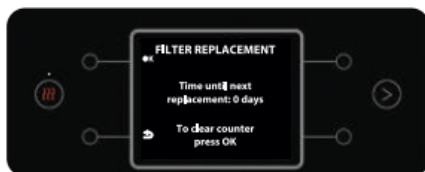

The number of days till the next filter replacement will appear on the display. To reset the filter replacement timer, press **OK**. To confirm, select YES using the top right **▲** and bottom right **▼** buttons. To confirm, press the **OK** button.

How to replace the UV-C lamp?

1. Lamp Replacement Instructions

1. Removing the lamp: Remove the water bar's top cover.

Pull the lamp gently upwards. A message will appear on the display to install a new lamp.



Warning!
Do not use the UV lamp when it is out of the water bar as dangerous UV-C radiation may affect your eyes and skin.

2. Inserting a new lamp: Remove the wrapper from the new lamp, avoid touching the glass body of the lamp.

Insert the new lamp into the water bar. Select NEW LAMP.



3. Lamp successfully installed The message UV LAMP INSTALLED SUCCESSFULLY will appear on the display.

2. Displaying and Resetting the UV Lamp Replacement Timer

It is possible to show the time till the next lamp replacement on the display; and reset it if necessary. To display or reset the UV lamp replacement timer, enter the UV LAMP REPLACEMENT sub menu.

MENU → **MAINTENANCE** → **UV LAMP REPLACEMENT**



The number of days till the next lamp replacement will appear on the display. To reset the filter replacement timer, press **OK**. To confirm, select YES using the top right ▲ and bottom right ▼ buttons. To confirm, press the **OK** button.