


Edge Water Filter and UV-C Lamp Replacement


Replacing the Water Filter:




1. Remove the top panel.

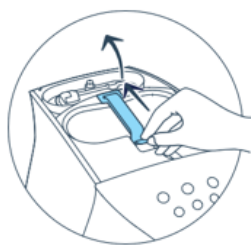


2. Press the tab and lift the clip.

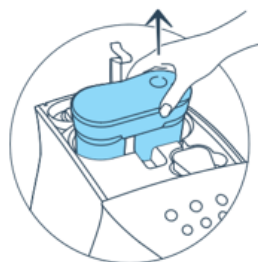

3. Carefully pull the water filter upwards to remove it.

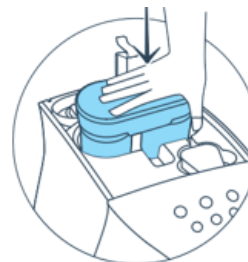

4. Insert the new Water filter and press it down gently.

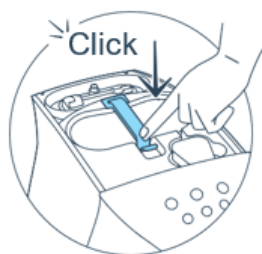

5. Close the clip until it clicks into place.



6. Reattach the top panel.



Warning!

Do not dispense hot water while replacing the water filter.



Note:


If the water filter is not installed correctly, has expired, or is not a genuine replacement part, the Water Filter indicator will flash red, accompanied by a single beep, before turning solid red.


When the water filter is installed correctly, the Water Filter indicator will flash blue and the Water Bar will beep twice, indicating that you can begin flushing the new filter.

Flushing the New Water Filter



1. Place a suitable container under the spout and press the Cold Water  button. The Water bar will flush the filter with 5 litres of cold water. To stop the water flow at any time, press any button. To continue, press the Cold water  button again.

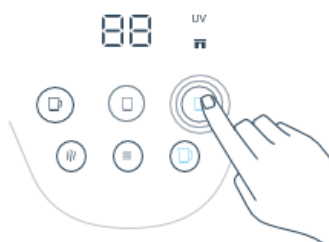


2. Once the flushing is complete the water filter  icon will flash blue, accompanied by two beeps, confirming that the filter is installed correctly and ready for use.

Note: The water may appear cloudy during flushing - this is normal.

It is safe to drink the water only after completing the flushing process, which ensures clear, pure, and fresh-tasting water.

Edge Water Filter and UV-C Lamp Replacement


Replacing the UV lamp:

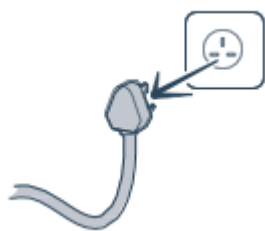


1. Unplug the device from the electrical socket.



2. Remove the top panel.

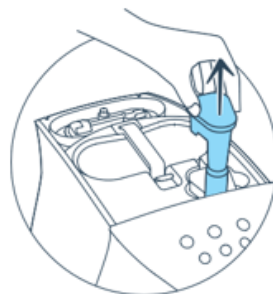


3. Firmly hold both sides of the UV-C lamp head and pull it straight up out of the Water Bar.

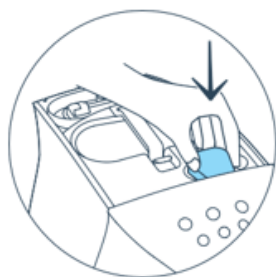

4. Install the new UV-C lamp.



5. Reattach the top panel.

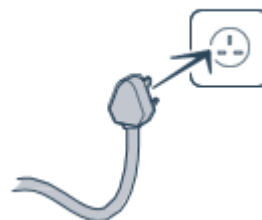

6. Plug the device back into the electrical socket.



7. Press and hold the Menu button to enter the Settings menu.



8. Press the Menu button repeatedly until UL is displayed.



9. Press the Cold Water button to select New UV-C lamp and then press the Menu button to confirm.

Warning!

Ultraviolet (UV) radiation is harmful to eyes and skin.



Note:

If the UV-C lamp is not installed correctly, the UV lamp indicator will flash red, accompanied by a warning beeps, and you will not be able to dispense water.

If the UV-C lamp is expired, the indicator will turn solid red.