

How to replace the filter?

a. Removing the used filter and installing a new one


1 Remove the top cover.




2 Press the PUSH button, pull the filter upwards using the extraction band.




3 Remove the new filter from its wrapper.

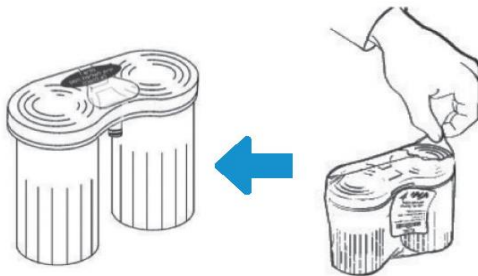

4 Insert the filter until you hear a click.

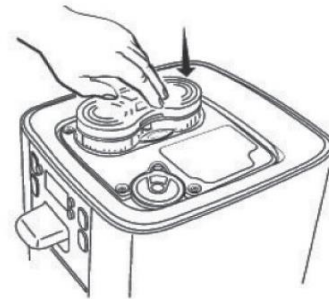

5 Replace the top cover.

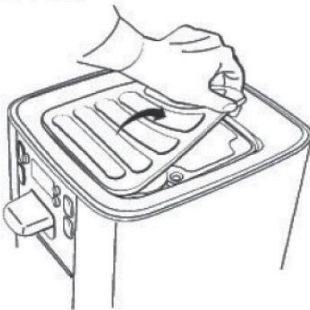

b. Draining air from the new filter

1 Press the COLD water button for 1 liter.



2 Wait 10 minutes.




3 Press the COLD water button again until water starts running.




c. Resetting the filter's counter


1 Press MENU.

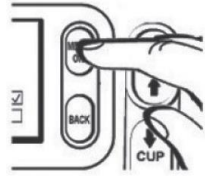


2 Scroll to "Replacing filter/lamp".

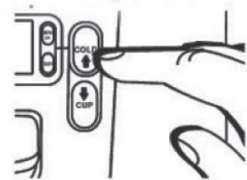


3 Press OK.

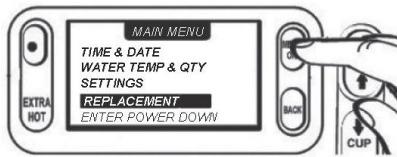


4 Scroll to "Filter".

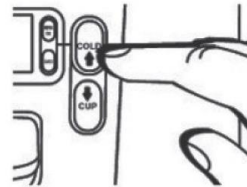


5 Press OK.

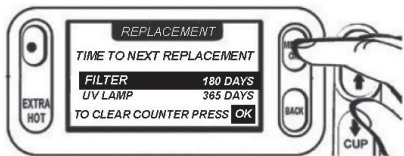

6 Scroll to "Yes".

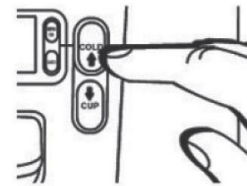

7 Press OK.

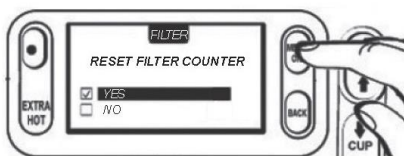


8 Press BACK until the main screen appears.



How to replace the UV-C lamp?

Warning: It is forbidden to turn on the UV-C lamp outside the device. Using it not according to the intended use or damage to the UV lamp socket may cause the escape of UV-C radiation which is harmful to the eyes and skin. The water purifier should not be operated in case of defect or damage to the lamp.


1 Remove the top cover.

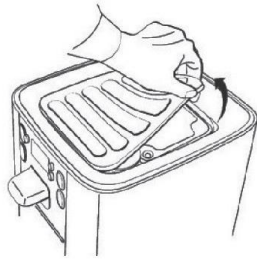


2 Pull the lamp upwards.




3 Remove the new lamp from its wrapper (avoid touching the lamp itself).

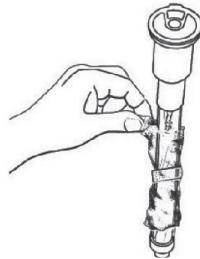


4 Insert the new lamp into the water purifier.

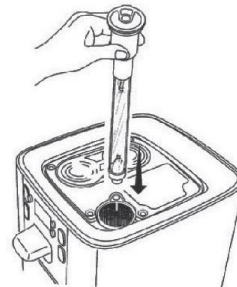


5 Scroll to "NEW UV LAMP".

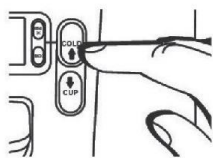

6 Press OK.

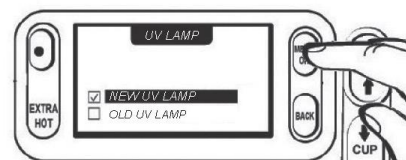

7 Replace the top cover.

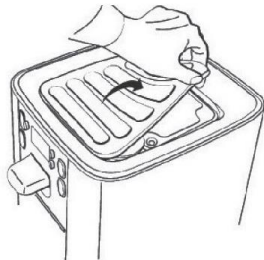

	Symptom	Resolution
1	Slow water flow	<ul style="list-style-type: none"> Remove and re-insert the filter, making sure that it fits into the filter holder completely. If the problem persists, contact our Service Department.
2	Cold water keeps running for a while after releasing the button	<ul style="list-style-type: none"> Wait for about 10 minutes and try again. If the problem persists, contact our Service Department.
3	No water comes out (cold only)	<ul style="list-style-type: none"> Remove and re-insert the lamp. Unplug and re-plug the device to the power source. If the problem persists, contact our Service Department.
4	The lamp does not come out	<ul style="list-style-type: none"> Use a spoon to remove the lamp.
5	Hot and cold water come out simultaneously	<p>Possibility A If you have pressed the COLD button but hot water come out, dispense hot water for 2-3 minutes.</p> <p>Possibility B If you pressed the HOT button but cold water come out, dispense cold water for 2-3 minutes.</p> <ul style="list-style-type: none"> If the problem persists, contact our Service Department.

